

# DC2DC *ePOWER* charger



## Owner's Manual

(DC2DC 24V Rev. 1.5)



**Enerdrive**  
DRIVING YOUR ENERGY NEEDS

## Table of Contents

<b>1. Introduction</b>	<b>4</b>
Please Keep This Manual For Future Reference	4
Disclaimer	4
Important Note	4
Product Numbers	4
Service Contact Information	4
Notice of Copyright	5
<b>2. Warnings</b>	<b>6</b>
Please read and follow the instructions and precautions carefully.	6
<b>3. PRODUCT DESCRIPTION</b>	<b>8</b>
<b>4. UNDERSTANDING THE UNIT</b>	<b>9</b>
Multistage Charging Process - GEL, AGM, Flooded & Program Modes	9
Lithium Charging Process	9
Smart Charging Feature	10
ePOWER charger algorithm	10
Lithium Battery charging algorithm	11
Battery Charger Voltage	11
Battery Bank Size Recommendation	12
EN3DC30-24 (Current Settings):	12
<b>5. INSTALLING THE CHARGER</b>	<b>13</b>
Mounting The Charger	14
<b>6. CONNECTING THE CHARGER</b>	<b>15</b>
Chassis Grounding Connection	15
DC Output Wiring	15
DC2DC 24V Battery Charger Connections	16
Recommended Cable Length, Size and Fuse Protection.	17
Standard Temperature Sensor Connection	17
Battery Wiring (Towing Applications):	18
Battery Wiring (Vehicle & Marine Applications):	19
<b>7. UNIT OPERATION</b>	<b>20</b>
Understanding The Charging Mechanism	20
Operating from a Start Battery / Alternator (CH3)	20

DC Input (CH2 – Solar / PV):	22
Maximising your Solar Harvest using the DC2DC 24V	23
Understanding the Display & Function Keys during normal operation	24
Understanding The Function Key 'MENU', 'SET' And 'SEL' During Charger Setting	25
Digital Display:	25
Button Functions:	26
Automatic Override Functions:	27
Programming Your Charger	27
Understanding the Two-Stage (Mode 2) Charging	27
Understanding The Three-Stage (Mode 3) Charging	27
Understanding The Battery Temperature Functions	27
Battery Temperature Compensation:	28
Battery Temperature Sensor (BTS) Voltage Adjustment:	28
Procedure To Set Or View Charger Setting	28
Procedure To Equalise Flooded Batteries	29
Use the following procedure to setup the charger for battery equalisation.	29
Understanding The Protection Features	30
Charging A Flat Battery	30
Understanding The Display Codes	30
<b>8. SPECIFICATIONS</b>	<b>33</b>
<b>9. WARRANTY</b>	<b>34</b>
2 Year Limited Warranty	34
3 Year Pro Rata Support Program	34
Return and/or Repair Policy	34
Limitations	35
Appendix A1	<b>36</b>
Appendix A2	<b>38</b>
Appendix A3	<b>40</b>

## 1. INTRODUCTION

Thank you for purchasing the Enerdrive ePOWER DC2DC 24V Battery Charger. With our state of the art, easy to use design, this product will offer you reliable service for providing a multistage, multi-input battery charger to charge the different types of batteries you have installed in either your home, boat, caravan, 4WD or commercial vehicle. This manual will explain how to use this unit safely and effectively.

### Please Keep This Manual For Future Reference

For safe and optimum performance, the Enerdrive ePOWER DC2DC 24V Battery Charger must be used properly. Carefully read and follow all instructions and guidelines in this manual and give special attention to the CAUTION and WARNING statements.

### Disclaimer

While every precaution has been taken to ensure the accuracy of the contents of this guide, Enerdrive assumes no responsibility for errors or omissions. Note the specifications and product functionality may change without notice.

### Important Note

Please be sure to read the entire manual before using your Enerdrive ePOWER DC2DC 24V Battery Charger. Misuse may result in damage to the unit and/or cause harm or serious injury. Read manual in its entirety before using the unit and save manual for future reference.

### Product Numbers

ePOWER DC2DC 24V Battery Charger Series	
Product Number	Product Description
EN3DC30-24	ePOWER DC2DC 24V Battery Charger 24V / 30Amp

\*ePOWER DC2DC 24V Battery Charger Owners Manual Rev. 1.5.

This user manual is applicable to DC2DC 24V models only.

### Service Contact Information

#### ENERDRIVE PTY LTD

P.O. Box 9159, Wynnum Plaza, Queensland, Australia 4178

Ph: 1300 851 535 / Fax: 07 3390 6911

Email: support@enerdrive.com.au

Web: www.enerdrive.com.au

## Notice of Copyright

Enerdrive ePOWER DC2DC 24V Battery Charger owner's manual © 2017 Enerdrive. All rights reserved. No part of this document may be reproduced in any form or disclosed to third parties without the express written permission of Enerdrive Pty Ltd, P.O. Box 9159, Wynnum Plaza, Queensland, Australia 4178. Enerdrive reserves the right to revise this document and to periodically make changes to the content hereof without obligation or organization of such revisions or changes, unless required to do so by prior arrangement.

### Exclusions For Documentation And Product Usage

Unless specifically agreed to in writing, Enerdrive Pty Ltd: makes no warranty as to the accuracy, sufficiency or suitability of any technical or other information provided in its manuals or other documentation

Assumes no responsibility or liability for losses, damages, costs or expenses, whether special, direct, indirect, consequential or incidental, which might arise out of the use of such information. The use of any such information will be entirely at the user's risk

Reminds you that if this manual is in any language other than English although steps have been taken to maintain the accuracy of the translation, the accuracy cannot be guaranteed

Makes no warranty, either expressed or implied, including but not limited to any implied warranties of merchantability or fitness for a particular purpose, regarding these Enerdrive products and makes such Enerdrive products available solely on an "as is" basis

Shall in no event be liable to anyone for special, collateral, incidental, or consequential damages in connection with or arising out of purchase or use of these Enerdrive products.

The sole and exclusive liability to Enerdrive, regardless of the form of action, shall not exceed the purchase price of the Enerdrive products described here in

## 2. WARNINGS

**Please read and follow the instructions and precautions carefully.**

This section contains important safety information for the Enerdrive ePOWER DC2DC 24V Battery Charger. Each time, before using the Enerdrive ePOWER DC2DC 24V Battery Charger. READ ALL instructions and cautionary markings on or provided with the DC2DC 24V Battery Charger, and all appropriate sections of this guide.

### CAUTION

This unit is intended for indoor use ONLY. It is not suitable for installation in an under bonnet vehicle application and such application will void warranty.

Battery Charger contains no user serviceable parts. See Warranty section for how to handle product issues.

Do not install the Enerdrive ePOWER DC2DC 24V Battery charger in any vehicle engine bay or confined area where heat build up may occur.

Avoid moisture ingress. Never expose the unit to snow, water, etc..

### WARNING: Shock Hazard.

**Keep Away From Children!**

### WARNING: Fire &/or Chemical Burn Hazard!

When charging batteries they can release explosive and corrosive gasses / chemicals. Please wear safety glasses and protective clothing including gloves when working around batteries

### LIMITATIONS OF USE

Do not use in connection with life support systems or other medical equipment or devices. The charger is not to be used by persons with reduced physical or mental capabilities or lack of knowledge and experience. Not to be operated or used by children.

### WARNING

#### Explosion Hazard!

DO NOT use the Enerdrive ePOWER DC2DC 24V Battery Charger in the vicinity of flammable fumes or gases (such as gas bottles).

AVOID covering the ventilation openings. Always operate unit in an open and well ventilated area.

Prolonged contact to high heat or freezing temperatures will decrease the working life of the unit.

### WARNING

#### Failure To Follow These Instructions May Result In Death Or Serious Injury!

When working with electrical equipment or lead acid batteries, have someone nearby in case of an emergency.

Study and follow all the battery manufacturer's specific precautions when installing, using and servicing the battery connected to the charger.

Wear eye protection and gloves.

Avoid touching your eyes while using this unit.

Keep fresh water and soap on hand in the event battery acid comes in contact with eyes. If this occurs, cleanse right away with soap and water for a minimum of 15 minutes and seek medical attention.

Batteries produce explosive gases. DO NOT smoke or have an open spark or fire near the system.

Keep unit away from moist or damp areas.

Avoid dropping any metal tool or object on the battery. Doing so could create a spark or short circuit which goes through the battery or another electrical tool that may create an explosion.

### 3. PRODUCT DESCRIPTION

The Enerdrive ePOWER DC2DC 24V Battery Charger is a multistage, multi-input battery charger to charge different types of batteries commonly installed in either boat's, caravan's, 4WD's or commercial vehicle's.

Enerdrive's ePOWER DC2DC 24V Battery Charger package includes the following items;	
1 x ePOWER DC2DC 24V Battery Charger	
1 x Battery Temperature Sensor 7.5 Meter Cable)	
1 x Owner's manual	

### 4. UNDERSTANDING THE UNIT

The Enerdrive ePOWER DC2DC 24V Battery Charger is a fully automatic multistage, multi input battery charger with the ability to charge from either an alternator linked to a battery; or via solar power with the in built Maximum Power Point Tracking (MPPT) Solar Controller. With two inputs available, the house battery will be charged from either the engine while underway, or via the solar panels when stationary. The process to choose either engine or solar is fully automatic and both functions are controlled from within the unit itself without the need for external relays.

During normal operation the ePOWER DC2DC 24V Battery Charger will do a full charge cycle to float stage on the house battery bank with ability to choose either GEL, AGM, Flooded, Custom Programmable or Lithium. Once float stage is reached the charger transitions to a power supply mode to support on-board DC loads.

#### Multistage Charging Process - GEL, AGM, Flooded & Program Modes

The ePOWER DC2DC 24V Battery Charger is a fully automatic, set and forget charger. It is designed to quickly and accurately recharge your deep cycle batteries utilising charger algorithms that help to maximise the life of your specialised deep cycle batteries.

The ePOWER DC2DC 24V Battery Charger features multistage smart charging technology that enables the charger to be connected to your battery banks permanently. With the input of multiple sources, you can be assured of charging your batteries whenever underway; or when the sun is shining on your solar array.

As dictated by battery manufacturer's recommendations, deep cycle batteries require a multistage charge sequence for perfect, fast and accurate charging. The Enerdrive ePOWER DC2DC 24V smart charger delivers three primary charge stages.

**Stage 1 – Bulk or Boost charge;** The battery is charged up to the full rated output current of the charger until the battery reaches its final charging voltage, known as its absorption voltage. In this step, around 80% of the battery is recovered as fast as possible.

**Stage 2 – Absorption Charge;** With the charger voltage held steady, the remaining 20% is replaced with the charger allowing the current to taper off as the battery approaches full charge.

**Stage 3 – Float;** Finally, in the float stage the charger voltage is lowered and held at a constant and safe predetermined level. This prevents the battery from being overcharged, yet allows the charger to supply enough current to make up for the self-discharge losses of the battery, while supporting additional loads connected to the battery (such as DC lighting and refrigerators). This stage allows for the charger to be used as a DC power supply.

#### Lithium Charging Process

The ePOWER DC2DC 24V charger has a specific charging profile for Lithium batteries. It has its own charging voltage and current settings that needs to be set by the user. It also requires the user to set the charger termination current ("L" setting). Once the user defined charge voltage is reached, the charger will start reducing the current output and the charging process will terminate when the charging current drops to the set termination current. This can take anywhere between 3 to 15 minutes. The unit will then act as a power supply to support


additional loads connected to the battery while the DC2DC 24V is powered from either the vehicle or solar inputs. A Bulk re-start will occur when battery voltage drops below 26.6V DC.

### Smart Charging Feature

The ePOWER DC2DC 24V Battery Charger will regulate its output based on the loads connected to your battery banks. This function is important to maintain the life of your battery banks as some battery chargers mistake loads for discharge and continue to keep the batteries in the bulk or absorption stage for extended periods of time, which will damage the battery bank. The ePOWER DC2DC 24V Battery Charger has two methods of load based regulation to ensure your battery charger transitions to float when it should do so.

### ePOWER charger algorithm

#### Battery Charging Curve For GEL, AGM, Flooded & Program Batteries: (Battery recharge in Bulk mode)

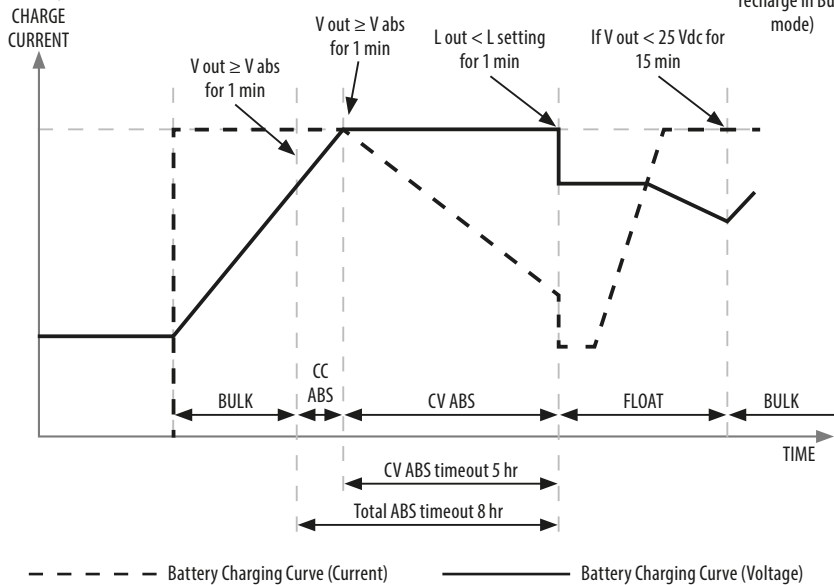

### Lithium Battery charging algorithm

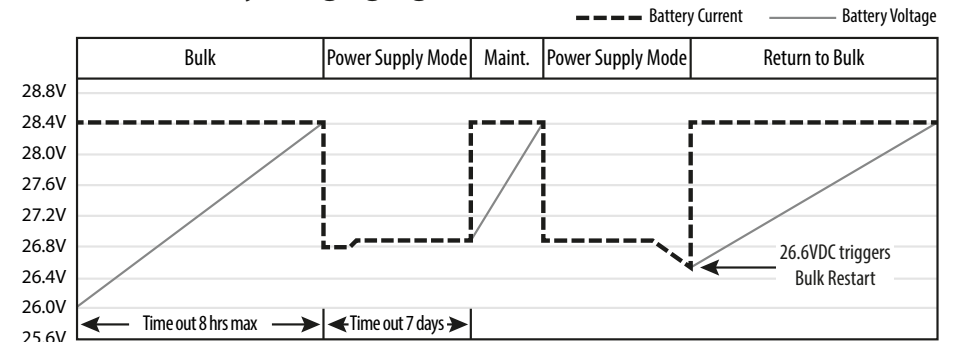


Diagram does not illustrate our current set points.

Note: Actual voltages depend on chosen algorithm.

### Battery Charger Voltage

Battery Type	Absorption	Float (See Note 3)	Equalisation
GEL	28.8 V	27.4 V	N.A.
AGM	29.4 V	27.2 V	N.A.
Flooded	28.8 V	26.6 V	31V (See Note1)
Lithium	27.8 V-29.2V (0.2V Step) (see Note2)	27V-28.4V (0.2V Step)	N.A.
Program (Custom Settings)	27.6V-29.6 (0.2V Step)	26V-27.6 (0.2V Step)	N.A.

\* For Concorde™ branded batteries (lifeline, sun xtender) use flooded setting and consult battery supplier for equalisation recommendations.

**Note 1:** Equalisation setting can only be used on flooded battery type selection only. See more details on Procedure to Equalise the Flooded Battery.

**Note 2:** Charger will terminate charging when charging current drops to below the set charger termination value.

**Note 3:** Charger is acting as a power supply with selected constant output voltage and preset maximum output current.

**NOTE:** The equalisation function although included in the ePOWER DC2DC 24V will rarely be used. To activate, the battery bank must be in float, and manually activated. A typical drive will not be long enough for the DC2DC function to complete the process. The MPPT Solar function may provide enough time for Equalisation, but the best recommendation will be an AC powered battery charger.

**Battery Bank Size Recommendation**

The battery charging current rating is based on the battery size. The battery bank should meet the minimum Ah rating as shown. If a smaller size battery bank is used, set the current rating to a lower value to match with the battery bank size. Normally, the minimum battery bank capacity is based on a C5 rating of the battery for charging.

EN3DC30-24				
<b>Current Setting</b>	5A	10A	20A	30A
<b>Battery Capacity</b>	Min 25Ah	Min 50Ah	Min 100Ah	Min 150Ah

**EN3DC30-24 (Current Settings):**

EN3DC30-24 Available Current Settings				
<b>Bulk ("h" Setting)</b>	5A	10A	20A	30A
<b>ABS Float ("L" Setting)</b>	0.3A/0.5A/1.0A	0.5A/1.0A/2.0A	1.0A/2.0A/4.0A	1.5A/3.0A/6.0A

Use the above table to set the Bulk and its related Absorption (ABS) to Float Charge Current.

**IMPORTANT NOTE: If in doubt of the "L" setting, use the highest available current setting for battery protection.**

**5. INSTALLING THE CHARGER**

 **WARNING**

Enerdrive recommends that all wiring be done by a skilled technician to ensure adherence to the best practice standards for on-board DC electrical installations. Failure to follow these instructions can damage the unit and could also result in personal injury or loss of life.

 **CAUTION**

**Before Installing The Unit Consider The Following:**

This unit is designed ONLY for internal mounting and should be used or stored in an indoor area away from direct sunlight, heat, moisture or conductive contaminants.

**DO NOT INSTALL IN VEHICLE ENGINE BAY**

This is an electronic device cooled by a fan, and will prematurely fail if installed in corrosive / moisture rich environments.

When placing the unit, allow a minimum of 75mm of space around the unit for optimal ventilation.

 **NOTE**

The Enerdrive ePOWER DC2DC 24V Battery Charger is designed to be permanently mounted.



### Mounting The Charger

- Choose an appropriate mounting location.
- For installing in an indoor location, the unit should be mounted vertically (with the battery terminals facing downwards). This provides the best thermal performance and drip protection. The unit should NOT be mounted upside down.
- For installing in a boat or marine environment, the unit should only be mounted vertically (Battery Terminals facing downwards only) to provide adequate drip protection.
- Use the base of the charger as a mounting template to mark the positions of the fixing screws.
- Drill the 4 fixing holes and place the Charger in position and fasten the unit to the mounting surface.



## 6. CONNECTING THE CHARGER

### Chassis Grounding Connection



### BEST PRACTICE

#### This Charger SHOULD BE CORRECTLY GROUNDED.

The unit chassis has a stud point on it for grounding. Connect the unit's chassis ground to the common ground point through the ground stud located near one of the unit mounting slots. (Battery DC negative is the best ground reference point in your installation).

### DC Output Wiring



### WARNING: Correct DC Wiring Is Required

The DC wiring used must be of appropriate size.

An individual fuse or breaker is required to be installed within 20cm of the both the start battery and house battery bank.

A DC isolator or fuse is also recommended for the solar input.

All devices must be rated for DC voltage and current.

The solar input fuse or breaker must be able to withstand the short circuit current rating stated on the solar panel array.

All wiring must conform or exceed the recommendations stated in this manual (page 17).

This is a Dual Input device. Different cable sizes are required for the alternator input, solar array input and the DC2DC 24V charger to battery connection.



## DC2DC 24V Battery Charger Connections



## Recommended Cable Length, Size and Fuse Protection.

DC2DC Connection Inputs	Require Length & Battery Cable Size		
<b>DC2DC set to =&lt;30A Output</b>	2 Meters to 5 Meters (2)	Up to 10 Meters (2)	Greater than 10 Meters
From Alternator Battery	6-16mm <sup>2</sup> @ 12vdc / 4-8mm <sup>2</sup> @ 24vdc	16-35mm <sup>2</sup> @ 12vdc / 8-16mm <sup>2</sup> @ 24vdc	Not Recommended
Primary Battery Connection (2)	16mm <sup>2</sup>	Not Recommended	Not Recommended

Note: Cable size quoted is one way from battery to device, however suggested cable size is calculated with return run.  
 1) Note: If solar panels are wired in Series (increased voltage), then typically 1 x 4mm<sup>2</sup> cable run per series string is suitable.  
 2) Based on 3% voltage drop.


Recommended Fuse Protection	
From Alternator Battery	12V Alternator = 70amp Fuse or Circuit Breaker 24V Alternator = 40amp Fuse or Circuit Breaker *No greater than 20cm from source battery. <b>PLEASE NOTE: Automatic re-settable circuit breakers are NOT recommended.</b>
From Solar Panels	Fusing recommended no greater than 20cm from input to DC2DC 24V Charger. Typically 15amps per solar panel (consult your panel specifications for further details).
Primary Battery Connection	40amp Fuse or Circuit Breaker.

### Standard Temperature Sensor Connection


- To install the temperature sensor, simply connect the RJ12 plug from the sensor to the RJ12 Temperature Sensor Port located next to the Remote Port.
- On the temperature sensor end, simply connect the ring terminals to the negative terminal of the main house battery bank.

**PLEASE NOTE: For lithium installations, the standard supplied temperature sensor is not required to be installed for these applications.**

**Battery Wiring (Towing Applications):**  
For Towed Applications i.e. Caravans, Camper Trailers

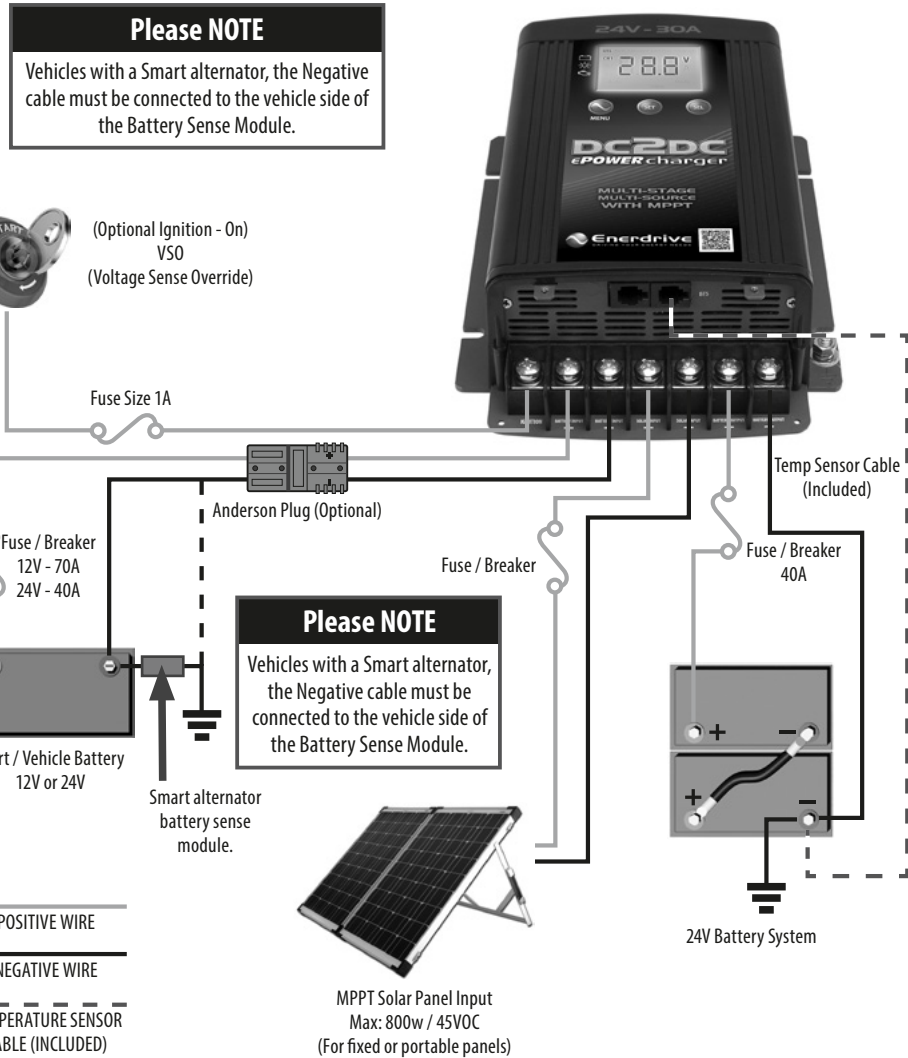

**Battery Wiring (Vehicle & Marine Applications):**  
For In Vehicle & Marine Installation. i.e. Motorhomes, 4WD's & Trucks.

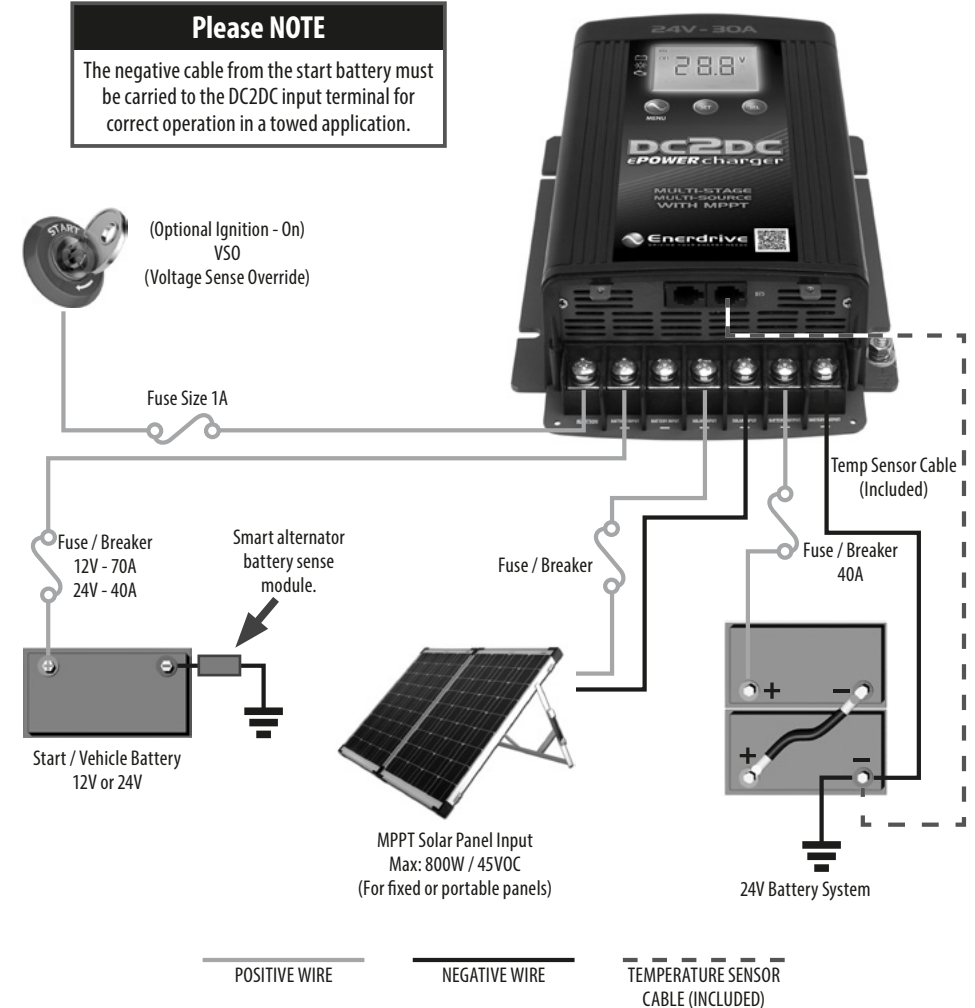

This diagram is for a reference only. No cables, fuse/breakers, batteries or solar panels are supplied with this unit. Local rules and regulations should be followed when installing this unit.

This diagram is for a reference only. No cables, fuse/breakers, batteries or solar panels are supplied with this unit. Local rules and regulations should be followed when installing this unit.

## 7. UNIT OPERATION

### Understanding The Charging Mechanism

**Note 1:** The Charger is powered by the battery connected to DC Output (CH1) and also supplied by CH2 or CH3 if available. The display will turn off to save power when Input Channel CH2 and CH3 are out of operating range.

### Operating from a Start Battery / Alternator (CH3)

Normal Operation:	Input Battery / Source	
	12V Input	24V Input
Input Voltage Range	10.5V – 16.0V	21.0– 32.0V
Normal Start-Up Voltage (Note A)	> 13.2V	> 26.4V
Normal Under Voltage Recovery Voltage (Note A)	> 12.8V	> 25.6V
Ignition Sense Terminal	Ignition Sense Terminal must see a minimum of 10.5V to trigger low voltage "Priority Mode".	
Low Start-Up Voltage (using Ignition Sense Terminal or using Manual Over-ride setting) (Note B)	> 12.3V	> 24.6V
Low Under Voltage Recovery Voltage (Note B)	> 12.0V	> 24.0V
De-Rated Voltage (with load) (Note C)	11.5V	23.0V
Under Voltage Shutdown (with load)	10.5V	21.0V
Over Voltage Shutdown	16.0V	32.0V
Over Voltage Recovery	15.5V	31.0V
Input Battery System Reset Voltage (NoteD)	< 7V	< 7V
Maximum Input Current - EN3DC30-24	30A	30A

**Note A:**

When the battery is charging through CH3 with normal operation (not through Ignition or override setting), the charger will charge for 3 minutes, it will then rest for 5 seconds to verify the Input voltage.

During the 5 seconds rest period, if the measured voltage is >12.8Vdc on a 12V System (>25.6Vdc on a 24V system), the unit will continue the charging cycle through CH3.

If the measured voltage on CH3 is <12.8Vdc (<25.6Vdc on a 24V system), the unit will disconnect from the vehicle source and switch back to charge from CH2 (solar if installed) until the CH3 voltage returns to >13.2Vdc on a 12V System (>26.4V on a 24V system).

Also, during the 3 minutes charging process, if the measured terminal voltage drops below <11.5V for a 12V system, (<23V for a 24V system), the charger will start to derate the output

current. This function is used to compensate for the use of long or thin wire between the Input Battery System and the unit input terminals. If the input voltage continues to drop below the <10.5V for a 12V system (<21V for a 24V system), the charging process will terminate and the unit will switch back to charge from CH2 (solar if installed) if installed. It will only switch back to CH3 if the CH3 voltage is >13.2V on a 12V system (>26.4V on a 24V system).

**Note B:**

When the unit has activated the battery charging process using the ignition sense terminal (Priority Mode) or using the Manual Override through the unit setting, the input voltage specification is reduced. It has the same charging process but with a Low Start-Up Voltage set to >12.3Vdc 12V system (>24.6V on a 24V system). This feature is designed to be used for vehicles fitted with "Smart Alternators".

If the measured voltage on CH3 is <12.0 Vdc (<24Vdc on a 24V system), the unit will disconnect from the vehicle source and switch back to charge from CH2 (solar if installed) until the CH3 voltage returns to >12.3Vdc on a 12V System (>24.6V on a 24V system).

The Low Under Voltage Recovery Voltage is set to > 12V (from 12.8V) on a 12V system and > 24V (from 26.4V) on a 24V system. During the 5 second rest period, if the input voltage returns above 12V/24V, it will continue the charging process and if the input voltage does not return to > 12V/24V, it will switch back to charge from the Solar - CH2 (if connected) until the Start - CH3 input has returned to the Low Start-Up voltage of 12.3V on a 12V system and 24.6V on a 24V system.

**Note C:**

During the 3 minute charging process, if the measured terminal voltage drops below the Under Voltage de-rated limit (11.5V for a 12V system, 23V for a 24V system), the charger will start to de-rate the charger current. This function is used to compensate the use of long or thin cable between the Input Battery and the unit terminals. If the voltage continues to drop to below the Under Voltage Shutdown limit of (10.5V for a 12V system and 21V for a 24V system), the charging process will terminate and the unit will switch back to charge from CH2 (solar if installed). It will only switch back to CH3 if the CH3 voltage returns to 13.2V (12.3v with ignition sense connected) on a 12V system and 26.4V (24.6V with ignition sense connected) on a 24V system.


**Note D:**

The CH3 DC Input (Battery Input) can accept a 12V or 24V battery with an alternator system. When the unit is first connected, the unit will measure the input voltage. If the voltage is >17V, it will assume it is connected to a 24V Input Battery/Alternator system. If the voltage detect is < 17V, it will assume it is connected to a 12V Input Battery/Alternator system. Once detected, it will store this into the microprocessor and it will only be erased if the Input battery is disconnected or if the measured Input Voltage drops to < 7Vdc.

**DC Input (CH2 – Solar / PV):**

PV Input Voltage Range	14.5 - 45V
PV Input Under Voltage Shutdown	< 14.5V
PV Input Under Voltage Recovery	15.0V
PV Input Over Voltage Shutdown	> 45V
PV Input Over Voltage Recovery	= < 44V
PV Charging Mechanism	MPPT type ( approx. 97% efficiency)
Maximum Input	800W *See Note below and "Maximising your Solar Harvest using the DC2DC 24V"

\*Note: The recommended maximum solar wattage input for the DC2DC 24V Charger is 800w. You can however "overdrive" the MPPT controller. Please note that doing this is partially an economic decision. You can install more power than the controller can use and this will contribute to better power availability. Enerdrive suggest a total maximum overdrive of 20% (total 1000w). On cloudy (or intermittent sunny) days there will be little or no power shaving and the extra power will serve the battery well with more energy harvest earlier and later in the day.

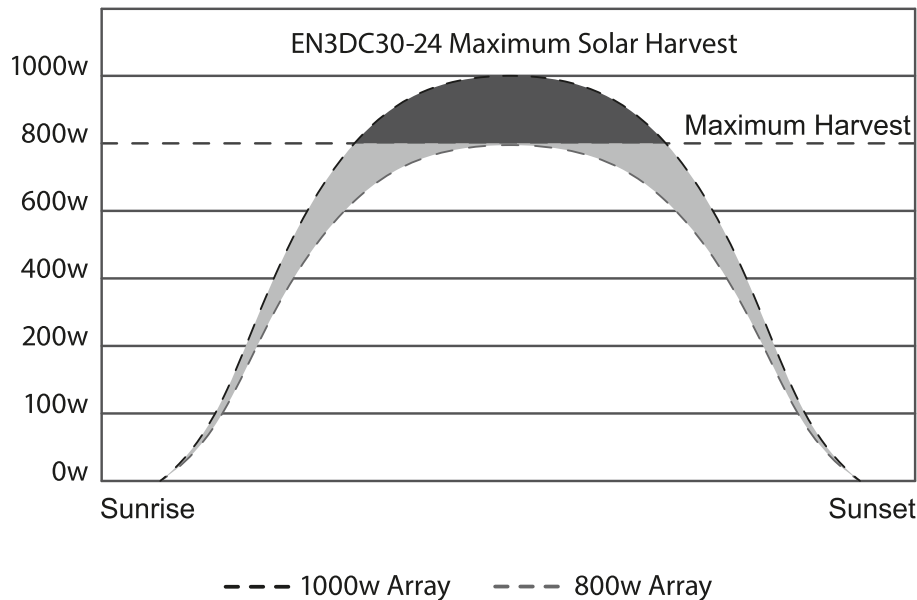

**Maximising your Solar Harvest using the DC2DC 24V**

The Solar Input on the DC2DC 24V unit has a maximum rated INPUT current of 30amps. This means it is optimised for using higher voltage 'grid' type modules for best output performance

The maximum achievable output using standard 20Voc solar modules will be approximately 15amps @ 14.4Vdc output.

Panel Array	Rated Wattage & Volts	Open Circuit rating	Estimated DC Amps Output (## See Below)
1	150watt @ 20Voc	150watts	4 Amps
1	200watt @ 43Voc	200watts	5 Amps
2	150watt @ 20Voc	300watts	8 Amps
2	200watt @ 43Voc	400watts	10 Amps
3	150watt @ 20Voc	450watts	11 Amps
3	200watt @ 43Voc	600watts	15 Amps
4	150watt @ 20Voc	600watts	15 Amps*
4	200watt @ 43Voc	800watts	24 Amps
5	150watt @ 20Voc	750watts	Not Recommended
5	200watt @ 43Voc	1000watts	30 Amps**

\* Maximum achievable output on the DC2DC 24V unit when using 20Voc Solar Panels will be the approximately 15amps.

\*\* Maximum achievable output on the DC2DC 24V unit when using 43Voc Solar Panels will be the approximately 30amps.

**## IMPORTANT NOTE: Estimated Amps Output is quoted based upon PERFECT Solar conditions including Sun Angle, Panel Mounting angle and Orientation to the sun. It needs to be noted that panel performance alters dramatically between Summer and Winter periods and actual performance may be impossible to predict.**

## Understanding the Display & Function Keys during normal operation

Display	
Digital Display	LCD with back lighting
Digital Display Info : CH1 CH2 & CH3	Charging Status, Voltage, Current Voltage
Fault/Warning	Error code E01-08, Warning A01-02
'CH3' Icon Flashing	CH3 > 12.0V on a 12V Input system CH3 > 24.0V on a 24V Input system and not charging from (alternator)
'CH3' Icon Solid	Charging from CH3 input (Start Battery / Alternator)
'CH2' Icon Flashing	CH2 > 14.5V and not charging from solar array
'CH2' Icon Solid	Charging from CH2 input (solar)

- During normal operation, the display will cycle through and show CH1 battery voltage, charging current and charging stage ('bul' – Bulk stage, 'Abs' – Absorption stage, 'Ful – Float stage) alternatively. When the 'MENU' key is pressed, it will display the other channel's battery voltage only
- CH3 icon will flash when the input voltage is above (> 12 on a 12V system or > 24V on a 24V system and it is not the source charging the battery. It will change to solid when it becomes the source charging the battery.
- CH2 icon will flash when the input voltage is above the Flashing Voltage (> 14.5V) and is not the source charging the battery. It will change to solid when it becomes the source charging the battery.
- During normal operation, Every time the menu button is pressed once, the display will scroll through and show CH1, CH2 & CH3: Voltage' for 3 seconds and it will return to the normal display automatically. If CH2 or CH3 is not connected, it will show 0V.
- The display will remain ON when either one or both CH2 & CH3 inputs are available. The display will turn OFF if CH2 or CH3 is not available.
- During equalisation operation (for flooded batteries only), the numerical section on the display will show a flashing 'eq' indicating the equalisation process is in progress and it will not show the battery voltage or the charging current.

## Understanding The Function Key 'MENU', 'SET' And 'SEL' During Charger Setting

**CH1** - display is showing the charging battery info (charging status, voltage and current).

**CH2 or CH3** - When displayed symbol is solid this means the power is coming from the related channel and the other channel will be flashing if it is connected but not charging.

**"V"** - Display is showing the voltage

**"A"** - display is showing the current

**"Auto"** - units Silent mode is switched on

**"Priority"** - the units "ignition Sense" terminal is connected or the unit is set to Manual Override mode

**"Mode"** - charging mode setting\*

**"Temp"** - Temperature setting\*

*\*Will only display when selected setting is active*






### Digital Display:

- During the charging process, the display shows 'CH1' charging status, voltage and current repeatedly, and 'CH2' or 'CH3' symbol is solid to indicate the active input source. If the other input channel is available and the voltage is above the 'CH2 and CH3 Flashing Voltage' the icon will be flashing. When the menu button is pressed once, the display will change to show CH1 Voltage for 3 seconds, CH2 voltage for 3 seconds and CH3 voltage for 3 seconds. The display will then revert back to normal operation and will show the CH1 info.
- When the Battery (CH1) is fully charged, it will show 'CH1' and 'FLO', voltage and current repeatedly on the display.
- The selected "battery type" icon is always ON at all times during the whole charging process.
- The 'Priority' Icon turns ON when the "ignition sense" terminal is connected or the unit is set to 'Manual Override' mode.






**Button Functions:**

 MENU	<ul style="list-style-type: none"> <li>• During normal charging operation, press once to change the display to show CH1, CH2 and CH3 voltage.</li> <li>• During normal charging operation, press and hold for more than 3 seconds to enter Charger Function Setting Menu</li> <li>• When CH2 or CH3 is not available (voltage detect is below the sense voltage), display will turn OFF. Press once will temporary trigger on the display and it will automatically cycle through all three channels voltage, the software revision and then turn off.</li> </ul>
 SET	<ul style="list-style-type: none"> <li>• During the charger Setup Menu, this button is used to confirm the setting and continue to the next menu.</li> <li>• Manual Override Mode: During normal operation, when the input source is charging from CH2, press and hold for more than 10 seconds to turn Priority mode ON, 'Priority' icon on display will turn ON. This will force the charger from being connected to CH2 and connect it to CH3 (subject to CH3 being 12.3v or 24.6V or higher). If CH3 is not connected or out of operating range, it will go back to CH2. This setting mode is used when CH2 (Solar) is available but the charging current is too small due to the availability of sunlight. Use the same procedure to turn off the 'Manual Override' mode when not required.</li> <li>• <b>Please Note:</b> If Manual Override Mode is used and left on there is a risk of flattening the start battery. The preferred method is to use the automatic override method by connecting the ignition source to the ignition terminal of the DC2DC 24V charger.</li> <li>• With Flooded Battery Type setting, press and hold the "SET" and "SEL" buttons together for more than 5 seconds will force the charger into Equalized Mode and it will start equalizing the flooded battery. Please note; the battery has to be set to 'Flooded' battery type in-order to have this function activated.</li> </ul>
 SEL	<ul style="list-style-type: none"> <li>• During the charger Setup Menu, this button is used to change to the next available setting.</li> <li>• 'Silent' mode (Fan OFF mode): During normal operation, Press and hold for more than 10 seconds will force the fan to turn OFF. 'Auto' icon will turn ON. The charger current will reduce to half of the set current. The unit will go back to normal after 12 hours and the 'Auto' icon will turn OFF.</li> <li>• <b>Note:</b> Every time the "MENU", "SET" and/or "SEL" buttons are pressed, the back light will illuminate and will automatically turn off after 60 seconds.</li> </ul>

**Automatic Override Functions:**

When positive power is applied to the "Ignition Sense" terminal (do not connect to ground), it will force the charger to connect to CH3 as long as CH3 is within the voltage range >12.3V or 24.6V on a 24v input.

**Programming Your Charger**

 MENU	<p>Press and hold the key for longer than 3 seconds to enter charger setting mode and show function setting. Once new setting is done, press 'MENU' again for longer than 3 seconds to exit the charger setting mode.</p>
 SET	<p>Press the key once to keep / save the chosen setting and change the display to show the next menu to continue other settings. Note: The selected setting will quickly flash 3 times to acknowledge the setting.</p>
 SEL	<p>Press the key to view other available settings.</p>

**Understanding the Two-Stage (Mode 2) Charging (Default setting is 3)**

The DC2DC 24V can be set to act as a 2 stage charger (Bulk/Float). Certain applications may require a 2 stage charge process and by setting this option, the DC2DC 24V unit will act accordingly to meet this requirement.

During the Bulk stage, the battery accepts the maximum constant current from the charger. In Float stage, the charger continuously produces a lower constant float voltage to maintain the battery in a fully charged stage.

**Understanding The Three-Stage (Mode 3) Charging**

The Three-Stage Charging (Mode 3) has a Bulk/Absorption/Float sequence. During the Bulk stage, the battery accepts the maximum constant current from the charger. In the Absorption stage, the battery voltage is held to constant voltage and the charging current will slowly reduce. In Float stage, the charger continuously produces lower constant float voltage to fully top up and maintain the battery in a fully charged stage.

The charger will automatically restart the full charging cycle if it senses the battery bank is discharged to lower than 25.0V for lead acid batteries and 26.6V for lithium batteries.

**Understanding The Battery Temperature Functions**

The Battery Temperature Sensor is included with the charger to protect your battery and provide better charging voltage accuracy.

When the battery temperature sensor output is used, it is highly recommended to be installed on the main battery bank at the negative terminal. The sensor senses the battery

temperature and overrides the manual temperature settings and makes small adjustments to the charging voltage.

**If using lithium batteries, leave temp set to “NOR” (Normal) and leave temp sensor disconnected.**

**Battery Temperature Compensation:**

There are three manual battery temperature settings on the unit (‘Lo’, ‘nor’ and ‘hi’). See the table below for voltage adjustments for temperature compensation.

Temperature Setting	Recommended Battery Temperature	Battery Type	Voltage adjustment from 25°C normal setting
Low (Lo)	< 5°C	GEL, Flooded	+ 0.338 V
		AGM	+ 0.263 V
Normal (Nor)	> 5°C and < 30°C	GEL, Flooded	0 V
		AGM	0 V
High (Hi)	> 30°C	GEL, Flooded	- 0.135 V
		AGM	- 0.105 V

**Battery Temperature Sensor (BTS) Voltage Adjustment:**

Battery Temperature	Battery Charging Voltage Adjustment from 25°C	
	Flooded and GEL type	AGM type
< 25°C	+ 0.0135V / °C	+ 0.0105V / °C
25°C	0V	0V
> 25°C	- 0.0135 / °C	- 0.0105 / °C

Note: The above voltage compensation will only work with the supplied Battery Temperature Sensor fitted which will override the unit temperatures’ (Lo, Nor, Hi) setting. If using lithium batteries, leave temp setting “NOR” (Normal) and leave temp sensor disconnected.

**Procedure To Set Or View Charger Setting**

Follow the procedure or sequence in Appendix A1 and A2 (see back of this manual) to set or view the charger setting.

**Procedure To Equalise Flooded Batteries**



**Explosion Hazard And Risk Of Battery Damage.**

The battery generates explosive gases during equalisation. Follow all the battery safety precautions listed in the manual.

When using the equalisation mode, the user has to be sure the battery connected to the battery charger is a flooded battery type. Equalizing a non-flooded battery may overcharge the battery and may cause the battery to explode.



**Risk of battery and equipment damage.**

Only Flooded lead-acid can be equalised. Consult your battery manufacturer or read the battery manual when you try to equalise your batteries.

Disconnect any DC load connected to the battery, as during equalise mode, the charger will produce 31.0V to the batteries. You must monitor the battery specific gravity throughout the equalisation process to determine the end of the equalising cycle.

Before setting the equalisation mode, please be sure the battery is a flooded battery type. When the battery equalisation has started, the charger will automatically fully charge the battery bank and will then follow with 1 hour of equalisation. Check the battery electrolyte level during the equalisation period. If necessary, refill with distilled water only. All cells should have similar electrolyte levels. If distilled water is added, batteries must undergo a complete charge cycle. The charger cannot determine when to terminate the equalisation of the battery, a one hour time-out is set and this is used as a safety feature to require the user to continually re-activate it as necessary after checking batteries manually.

**Use the following procedure to setup the charger for battery equalisation.**

With Flooded Battery Type setting, Press and Hold Button “SET” and “SEL” together for more than 5 seconds. This will force the charger to go into to Equalized mode and it will start equalizing the flooded battery. Please note the battery mode setting has to be set to ‘Flooded’ battery type in-order to have this function activated.



## Understanding The Protection Features

### De-rating Charging Current:

When the charger senses the environmental temperature is above 50°C, the maximum charger current will de-rate to 1/2 of the set value (A01 warning code will display). The charger will recover automatically back to maximum charging current when the environmental temperature drops to below 45°C.

### Over Temperature Shutdown:

When the charger senses the environmental temperature is above 60°C, the charger will shutdown. It will recover automatically when the environmental temperature drops to below 45°C.

### Battery Reverse Polarity:

When a reverse polarity is connected to the battery bank, "Error Code E08" on the display will appear.

## Charging A Flat Battery

The charger is designed to charge batteries with terminal voltage greater than 17.0Vdc.

Re-charging a flat battery requires extreme care and attention. It is best to re-charge using short frequent cycles rather than one long bulk cycle. Battery damage or failure may occur if the battery is discharged so deeply.

## Understanding The Display Codes

Codes will show on the display when either a function or internal warning / fault, such as high internal temperature or DC out of range is detected and the charger may shut down to protect itself until the fault has cleared. See table description below for more information.

Code	Description
bul	<b>The charger is in Bulk Charging Mode</b> <i>Bulk or Boost charge;</i> The battery is charged at the set rated output current of the charger until the battery reaches its final charging voltage, known as its absorption voltage. In this step, around 80% of the battery is recovered as fast as possible.
abs	<b>The Charger is in Absorption Charging Mode</b> <i>Absorption Charge;</i> With the charger voltage held steady, the remaining 20% is replaced with the charger allowing the current to taper off as the battery approaches full charge.
FUL	<b>The charger is in Float Charging &amp; Power Supply Mode</b> <i>Float;</i> Finally, in the float stage the charger voltage is lowered and held at a constant and safe predetermined level. This prevents the battery from being overcharged, yet allows the charger to supply enough current to make up for the self-discharge losses of the battery, while supporting additional loads connected to the battery (such as DC lighting and refrigerators). This stage allows for the charger to be used as a DC power supply.
CH3	<b>CH3 Input Voltage Check</b> This will display for 5 seconds every 3 minutes while charging from the alternator input (CH3) and is normal operation when the charger is checking the under voltage recovery limit (see page 18 for details).

E01	<b>CH3 High Input Voltage Shutdown</b> This means the unit has detected the input from the Start/Alternator has gone above 16.0V on a 12V input or 32.0V on a 24V input. This error will clear once the input has dropped below 15.5V on a 12V input or 31.0V on a 24V input.
E02	<b>CH3 Low Input Voltage Shutdown</b> This means the unit has detected that the input from the Start/Alternator has gone below 10.5V on a 12V input or 21.0V on a 24V input. This error will clear once the input has risen above 13.2V on a 12V input or 26.4V on a 24V input. <b>If you have this error:</b> <ul style="list-style-type: none"> <li>• Check that the voltage of your Start Battery is above 13.2V on a 12V input or 26.4V on a 24V input.</li> <li>• Check that you have not left the "Priority" (Override) feature activated (Manual or Auto)</li> <li>• Check that the battery cable from the Start Battery is correctly sized.</li> <li>• Check you don't have a loose terminal or blown fuse.</li> </ul>
E03	<b>CH2 High Input Voltage Shutdown</b> This means the unit has detected the input from the solar has gone above 45.0V. This error will clear once the input has dropped below 44.0V. <b>If you have this error:</b> <ul style="list-style-type: none"> <li>• Check the specification of your panels – the Volts Open Circuit (VOC) should not exceed 45VOC</li> <li>• Make sure the solar panels have not been connected in series as this will increase the VOC voltage of the panel array.</li> </ul> <b>Please Note:</b> Maximum solar VOC input must not exceed 45VOC or damage to the unit will occur.
E04	<b>CH2 Low Input Voltage Shutdown</b> This means the unit has detected the input from the Solar Array cannot sustain voltage above 14.5v. <b>If you have this error:</b> <ul style="list-style-type: none"> <li>• Check that you are not in a low light/non direct sunlight situation i.e. Early morning / late afternoon.</li> <li>• This may also happen if your solar panels are inside in a shed with a skylight or Hi Bay Lights running or outside under Flood Lights.</li> </ul> If you find this is happening with your unit when stored, we recommend fitting a DC Breaker to the output of the DC2DC 24V and turning it off when the unit is not in use/storage.
E05	<b>CH1 High Input Voltage Shutdown</b> This means the unit has detected that the Main/House battery has gone above 32.0V. This error will clear once the input has dropped below 31.0V. This may be due to charging from another source. i.e. Another solar controller or AC battery charger.
E06	<b>Over Temperature Shutdown</b> When the charger senses the environmental temperature above 60°C, the charger will Shut down. It will recover automatically when the environmental temperature drops below 45°C. <ul style="list-style-type: none"> <li>• Check to make sure the fan is working.</li> <li>• Make sure the unit has good ventilation.</li> </ul>
E07	<b>BTS Over Temperature Shutdown</b> This means the units Battery Temp Sensor has detected that the batteries are too hot and has shut down to not over charge the batteries. <b>If this occurs, take care and check the temperature of the batteries.</b> <ul style="list-style-type: none"> <li>• If the Batteries are Hot –you may have a dropped cell or faulty battery. Stop all charging and see your local battery shop to get your batteries tested.</li> <li>• If the Batteries/Terminals are still cool or only warm, you may have a bad temp sensor. Unplug the temp sensor and call Enerdrive.</li> </ul>

<b>E08</b>	<p><b>CH1 Output Short Circuit</b> This means there is a Short Circuit on the DC output to your Main/House battery. <b>If this is displayed, check the following:</b></p> <ul style="list-style-type: none"> <li>• The output wires are not shorted together.</li> <li>• The output wires are wired correctly and not reverse polarity.</li> </ul>
<b>A01</b>	<p><b>Over Temperature Warning</b> When the charger's internal temperature is &gt; 60°C, the unit will shut down to protect itself. The unit will return back to normal charging once the internal temperature is &lt; 58°C</p> <ul style="list-style-type: none"> <li>• Check to make sure the fan is working.</li> <li>• Make sure the unit has good ventilation.</li> </ul>
<b>A02</b>	<p><b>BTS High Temperature Warning</b> When the battery temperature sensor is &gt; 58°C, the unit will shut down to protect the batteries. The unit will return back to normal charging once the battery temperature sensor is &lt; 56°C.</p> <ul style="list-style-type: none"> <li>• Check to make sure the batteries are not hot.</li> <li>• Make sure the batteries have good ventilation.</li> </ul>

## 8. SPECIFICATIONS

Output Rating	
Output Voltage	24V Nominal (17.0V min)
Output Current	30A
Output Power	865W

Charger DC Output (CH1):	
Selectable Battery Type	Gel, AGM, Flooded, Lithium, Program
Charger Voltage Range	27.6V – 31.0V
Float Voltage Range	26.0V – 27.6V
Charger Current (User Selectable)	5 / 10 / 20 / 30A (default 30A)
Equalize Voltage (Flooded Battery)	31.0V
Equalize Charging Current	10% of Bulk Current Setting
Charging Control	2 stage / 3 stage selectable (Default 3 stage)
DC Output Bank	Single
Current draw from CH1 when not operating	= < 50mA
Battery Temperature Setting	Low/ Normal/ High (Battery Temperature Sensor Standard)
Efficiency	95%

INPUT Rating (CH2 - MPPT Solar)	
Input Voltage	14.5 - 45VOC
Maximum Solar Input	≤ 23V input, 500W (600W allowable) ≥ 37.5V-45V input, 800W (1000W allowable)

INPUT Rating (CH3 - Start/Alternator)	
Input Voltage	10.5 - 16VDC / 21 - 32VDC

Dimensions	
Height x Width x Depth	242mm x 172mm x 74mm
Unit Weight	1.85 Kg
Shipping Weight	2.17 kg

Note: Specifications are subject to change without notice.



## 9. WARRANTY



### 2 Year Limited Warranty

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The limited warranty program is the warranty that applies to all Enerdrive products, and it sets forth all the responsibilities of Enerdrive. There is no other warranty, other than those described herein. Any implied warranty of merchantability of fitness for a particular purpose of the Enerdrive product is limited in duration to the duration of this warranty.

This Enerdrive product is warranted, to the original purchaser only (proof of purchase is required), to be free of defects in materials and workmanship for two years from the date of purchase\* without additional charge. The warranty does not extend to subsequent purchasers or users other than OEM applications.

This Enerdrive product is not intended for commercial use. This warranty does not apply to damage to units from misuse or incorrect installation/connection. Misuse includes wiring or connecting to improper polarity power sources.



### 3 Year Pro Rata Support Program

In addition to our standard 2 years warranty, we offer a further 3 years of support with our pro-rata service program. In the event of an out of warranty product issue we can upgrade you with a new product for a fraction of the new price. With repair on many products becoming harder and harder these days, this program provides our customers with the greatest peace of mind possible.

### Return and/or Repair Policy

If you are experiencing any problems with your unit, please contact our customer service department at [support@enerdrive.com.au](mailto:support@enerdrive.com.au) or Phone 1300 851 535 before returning product to retail store. After speaking to a customer service representative, if products are deemed non-working or malfunctioning, the product may be returned to the purchasing store within 30 days of original purchase. Any defective unit that is returned to Enerdrive within 30 days of the date of purchase will be replaced free of charge.

If such a unit is returned more than 30 days but less than two years from the purchase date, Enerdrive will repair the unit or, at its option, replace it, free of charge. If the unit is repaired, new or reconditioned replacement parts may be used, at manufacturer's option. A unit may be replaced with a new or reconditioned unit of the same or comparable design. The repaired or replaced unit will then be warranted under these terms for the remainder of the warranty period. The customer is responsible for the shipping charges on all returned items back to Enerdrive.

### Limitations

This warranty does not cover accessories, such as adapters and batteries, damage or defects result from normal wear and tear (including chips, scratches, abrasions, discolouration or fading due to usage or exposure to sunlight), accidents, damage during shipping to our service facility, alterations, unauthorized use or repair, neglect, misuse, abuse, failure to follow instructions for care and maintenance, fire and flood.

If your problem is not covered by this warranty, contact our Support Team at [support@enerdrive.com.au](mailto:support@enerdrive.com.au) or phone 1300 851 535 for general information if applicable.

# Appendix A1 LEAD ACID MODE

VERSION: REV. 1.0



Charger configuration is a simple step by step process as shown below.  
 For Tech Support call Enerdrive on 1300 851 535  
**NOTE:** The current setting below is based on the EN3DC30-24 battery charger.



Press and hold MENU button for 3 seconds to enter the Charger Function Menu



Display will show recent setting.

GEL AGM FLOODED LITHIUM PROGRAM

CH1 28.8V

CH1 BATTERY TYPE  
 GEL CH1  
 Display shows GEL & Bulk Voltage as currently set.

Press SEL to change battery type

AGM CH1 29.4V

Press SEL to change battery type

Flooded CH1 28.8V

Press SEL to change battery type

For Lithium and Program Battery Types refer to Appendix A2

**CH1 Battery Type**  
 Please choose the type of battery to be charged.  
 Your choices are GEL, AGM, Flooded, Lithium or Custom Program

Press SET to keep the current setting and toggle to the next menu

Press SET to keep the current setting and toggle to the next menu

Press SET to keep the current setting and toggle to the next menu

CH1 BULK CURRENT  
 GEL CH1  
 Display shows Bulk current as currently set.

Press SEL to enter high current menu

AGM CH1 4.5A

Press SEL to change current

Flooded CH1 4.30A

Press SEL to return to change current

**CH1 Bulk Current "h" setting**  
 This setting is used to determine the maximum output current that the charger is capable of.  
**Choose between 5 to 30A**

Press SET to keep the current setting and toggle to the next menu

Press SET to keep the current setting and toggle to the next menu

Press SET to keep the current setting and toggle to the next menu

CH1 ABSORPTION TO FLOAT CURRENT  
 GEL CH1  
 Display shows Absorption to Float as currently set.

Press SEL to enter low current menu

AGM CH1 1.3A

Press SEL to change current

Flooded CH1 1.5A

Press SEL to return to change current

**CH1 Absorption to Float Current "L" Setting**  
 This setting is used to determine when the battery is full. Once the current flow reaches this number or below, the charger deems the battery to be full and will shift the charger to the float state. If running constants loads i.e. Fridge etc, set the charger to the highest "L" number: **Choose between .3 to 6A (Subject to H setting see page 12)**

Press SET to keep the current setting and toggle to the next menu

Press SET to keep the current setting and toggle to the next menu

Press SET to keep the current setting and toggle to the next menu

CH1 CHARGE MODE  
 GEL CH1  
 Display shows Charge Mode as currently set.

Press SEL to enter mode menu

AGM CH1 3 Mode

Press SEL to change mode

Flooded CH1 2 Mode

Press SEL to return to change mode

Press SET to keep the current setting and toggle to the next menu

Press SET to keep the current setting and toggle to the next menu

Press SET to keep the current setting and toggle to the next menu

CH1 TEMP. SELECT  
 GEL CH1  
 Shows Temp Mode current setting.

Press SEL to enter temp menu

AGM CH1 nor Temp

Press SEL to change temp

Flooded CH1 hi Temp

Press SEL to change temp

Press SEL to return to change temp

**\* Disregard the Temp Select setting if the Temperature Sensor is NOT connected.**

Press SET to keep the current setting and return to the top level menu

Press SET to keep the current setting and return to the top level menu

Press SET to keep the current setting and return to the top level menu

Press SET to keep the current setting and return to the top level menu

**NOTE: At any function setting, pressing the MENU button will exit the function mode.**

**WARNING: FIRE HAZARD**

When choosing the battery type and setting the charging parameter, please consult the battery manufacturer on all the voltage and current settings. Using the wrong setting to charge a battery may overcharge, damage the battery and may cause a fire.

# Appendix A2 LITHIUM MODE

VERSION: REV. 1.0



Continues from Appendix A1


## CH1 Battery Type Menu



For Program Battery Types refer to Appendix A3

Press SEL to change battery type

Press SET to keep the current setting and toggle to the next menu

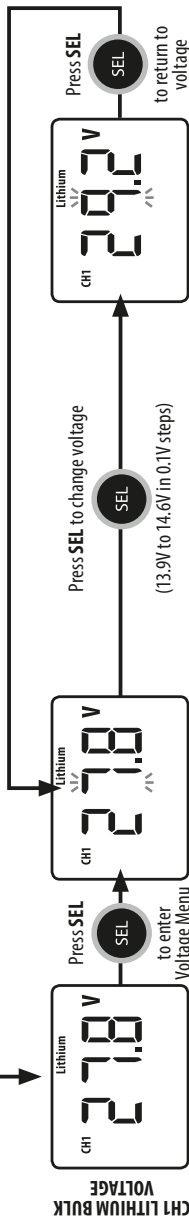

## CH1 LITHIUM BULK


Press SEL to enter Voltage Menu

Press SEL to change voltage

(13.9V to 14.6V in 0.1V steps)

Press SET to keep the current setting and toggle to the next menu

Press SET to keep the current setting and toggle to the next menu

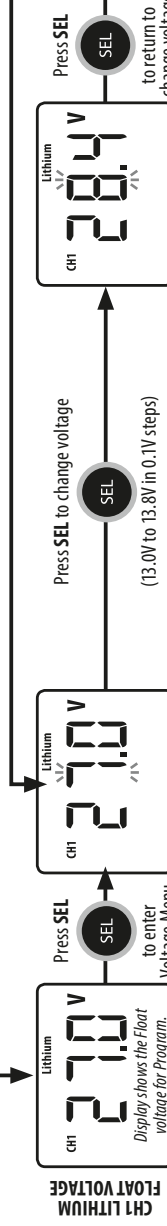

## CH1 LITHIUM FLOAT VOLTAGE


Press SEL to enter Voltage Menu

Press SEL to change voltage

(13.0V to 13.8V in 0.1V steps)

Press SET to keep the current setting and toggle to the next menu

Press SET to keep the current setting and toggle to the next menu

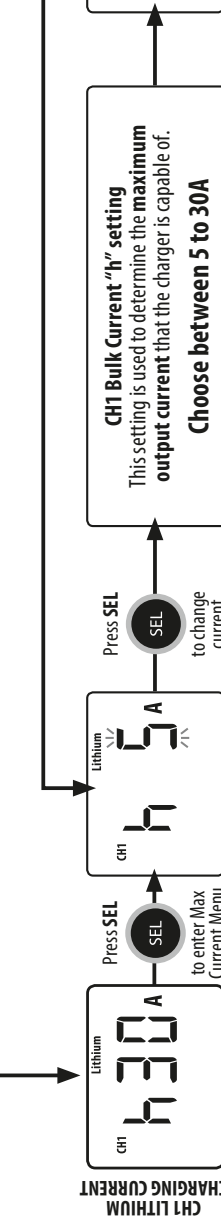

## CH1 LITHIUM CHARGING CURRENT


Press SEL to enter Max Current Menu

CH1 Bulk Current "H" setting  
This setting is used to determine the maximum output current that the charger is capable of.  
Choose between 5 to 30A

Press SEL to change current

Press SET to keep the current setting and toggle to the next menu

Press SET to keep the current setting and toggle to the next menu

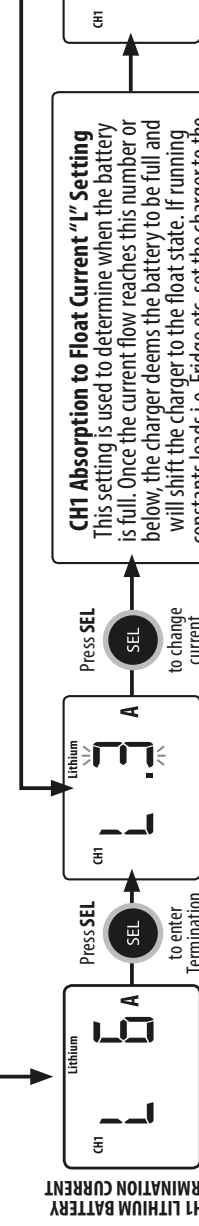

## CH1 LITHIUM BATTERY TERMINATION CURRENT

Press SEL to enter Termination Current Menu

CH1 Absorption to Float Current "L" Setting  
This setting is used to determine when the battery is full. Once the current flow reaches this number or below, the charger deems the battery to be full and will shift the charger to the float state. If running constants loads i.e. Fridge etc, set the charger to the highest "L" number: Choose between .3 to 6A  
(Subject to H setting see page 12)

Press SEL to change current

Press SET to keep the current setting and toggle to the next menu

Press SET to keep the current setting and toggle to the next menu

Press SET to keep the current setting and toggle to the next menu

Press SET to keep the current setting and toggle to the next menu



Press MENU to exit settings

Charger configuration is a simple step by step process as shown below.

For Tech Support call Enerdrive on 1300 851 535

NOTE: The current setting below is based on the EN3DC30-24 battery charger.



NOTE: At any function setting, pressing the MENU button will exit the function mode.

### WARNING: FIRE HAZARD

When using the Lithium Battery type setting to set the battery charging parameters, please consult the battery manufacturer on all the voltage and current settings. Using the wrong setting to charge battery may overcharge, damage the battery and may cause a fire.

# Appendix A3 PROGRAM MODE

VERSION: REV. 1.0



Continues from

Appendix A2  
CH1 Battery Type Menu

SEL AGM Flooded Lithium  $\frac{V}{A}$  Program  
CH1 27.6 V

Press SEL to change battery type

Back to Appendix A1 Battery Type

Press SET to keep the current setting and toggle to the next menu

CH1 PROGRAM  
CH1 27.6 V  
Display shows Program & Bulk Voltage as currently set.

Press SEL to change voltage (13.8V to 14.8V in 0.1V steps)

Press SET to keep the current setting and toggle to the next menu

Press SET to keep the current setting and toggle to the next menu

CH1 PROGRAM  
CH1 26.0 V  
Display shows the Float voltage for Program.

Press SEL to change voltage (13.0V to 13.8V in 0.1V steps)

Press SET to keep the current setting and toggle to the next menu

Press SET to keep the current setting and toggle to the next menu

CH1 PROGRAM  
CH1 43.0 A  
Display shows Bulk Current as currently set.

Press SEL to change current

CH1 Bulk Current "h" setting  
This setting is used to determine the maximum output current that the charger is capable of. Choose between 5 to 30A

Press SET to keep the current setting and toggle to the next menu

CH1 PROGRAM  
CH1 L 3 A  
Display shows Absorption to Float as currently set.

Press SEL to change current

CH1 Absorption to Float Current "L" Setting  
This setting is used to determine when the battery is full. Once the current flow reaches this number or below, the charger deems the battery to be full and will shift the charger to the float state. If running constants loads i.e. Fridge etc, set the charger to the highest "L" number: Choose between .3 to 6A (Subject to H setting see page 12)

Press SET to keep the current setting and toggle to the next menu

CH1 CHARGE MODE  
CH1 3 Mode  
Display shows Charge Mode as currently set.

Press SEL to change mode

Press SET to keep the current setting and toggle to the next menu



Press MENU to exit settings

Charger configuration is a simple step by step process as shown below.  
For Tech Support call Enerdrive on 1300 851 535  
**NOTE:** The current setting below is based on the EN3DC30-24 battery charger.



**NOTE: At any function setting, pressing the MENU button will exit the function mode.**

## WARNING: FIRE HAZARD

When using the Program Mode to set the battery charging parameters, please consult the battery manufacturer on all the voltage and current settings. Using the wrong setting to charge battery may overcharge, damage the battery and may cause a fire.









**ENERDRIVE PTY LTD**

P.O. Box 9159, Wynnum Plaza, Queensland, Australia 4178

Ph: 1300 851 535 / Fax: 07 3390 6911

Email: [support@enerdrive.com.au](mailto:support@enerdrive.com.au)

Web: [www.enerdrive.com.au](http://www.enerdrive.com.au)